


Application note - Connecting Auxillary Device Probe

3/2012

Secondary temperature sensor may be disconnected when not required as follows:

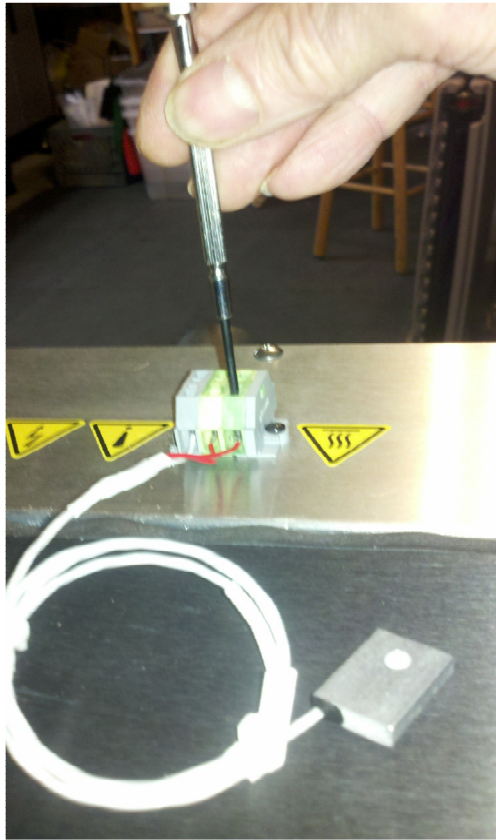

Using a small screwdriver, press down firmly on release spring in the hole above the wire to be inserted or removed.

When removing the top panel of controller, It is recommended to disconnect wires from terminal block, slide wires through terminal block. Protect wires from shorting after removing from block when servicing.



TotalTemp Technologies, Inc.

Support : JB@TotalTempTech.com

888.712.2228

www.totaltemptech.com

PO Box 632776

San Diego, CA, 92163